


R	1, 2	151, 113, 152, 153, 154, 101, 5, 102	4, 104, 154	9, 103, 107, 110, 106, 108, 126, 111, 109, 125, 124, 105	7, 114, 120, 112, 8, 121, 115	130, 125	126, 12, 122, 13	127, 128	129, 15, 16, 19, 20	17, 24	27, 10	18, 26, 22, 161, 162	28, 21	30, 29, 140, 32, 31
C	1, 2	26, 5, 157, 151, 4, 152, 153, 119	3, 6, 3, 153, 9, 155, 17, 8, 154, 14, 12, 10, 156, 10a, 11, 13, 103, 104, 101, 15, 19, 20, 102, 105, 109, 117, 108, 106, 16	110, 107, 28, 118	24, 115, 25, 22, 23	29, 121	56, 123, 124, 125, 126, 38, 128, 127, 35, 37, 51	36, 39, 140, 45, 48, 49	141, 144, 44, 47	166, 160	42, 162, 41, 43, 164, 161, 52, 63, 44, 165	55, 53, 54		

BF 314

BF 241

BF 241

R 137
U zavisnosti od kodirane
efikasnosti mikrofona
Tačka crvena 1k2
Tačka bela 3k3

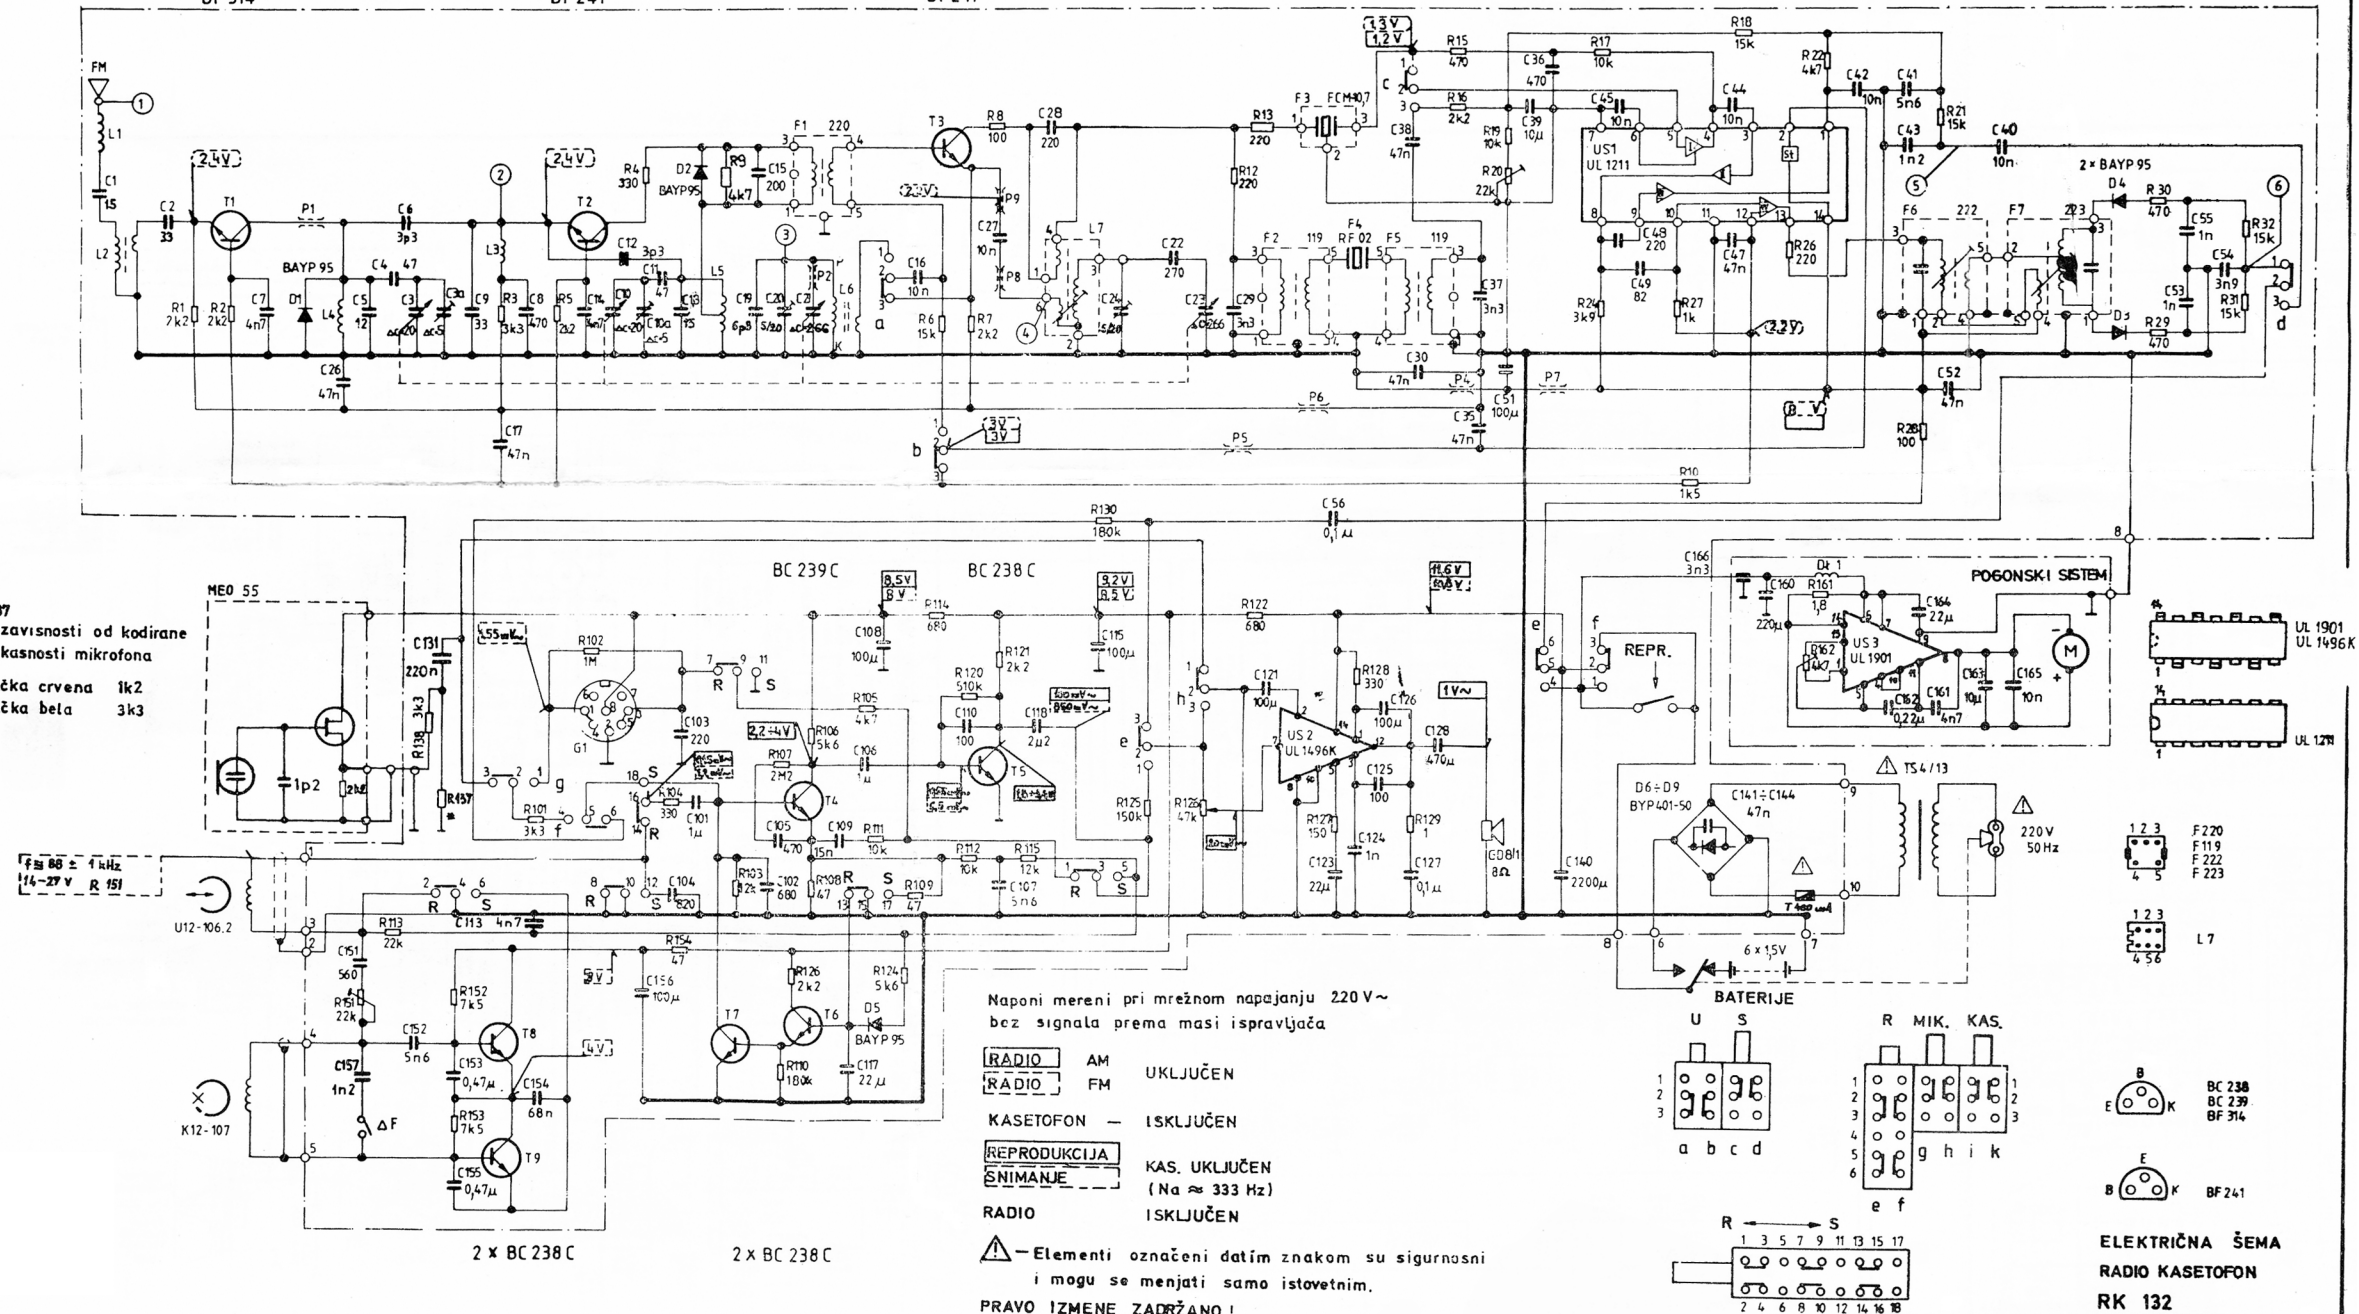

Naponi mereni pri mrežnom napajanju 220 V~
bez signala prema masi ispravljača

RADIO AM UKLJUČEN
RADIO FM UKLJUČEN

KASETOFON — ISKLJUČEN

REPRODUKCIJA
SNIMANJE KAS. UKLJUČEN
(Na ≈ 333 Hz)

RADIO ISKLJUČEN

! — Elementi označeni datim znakom su sigurnosni
i mogu se menjati samo istovetnim.

PRAVO IZMENE ZADRŽANO!

ELEKTRIČNA ŠEMA
RADIO KASETOFON
RK 132