


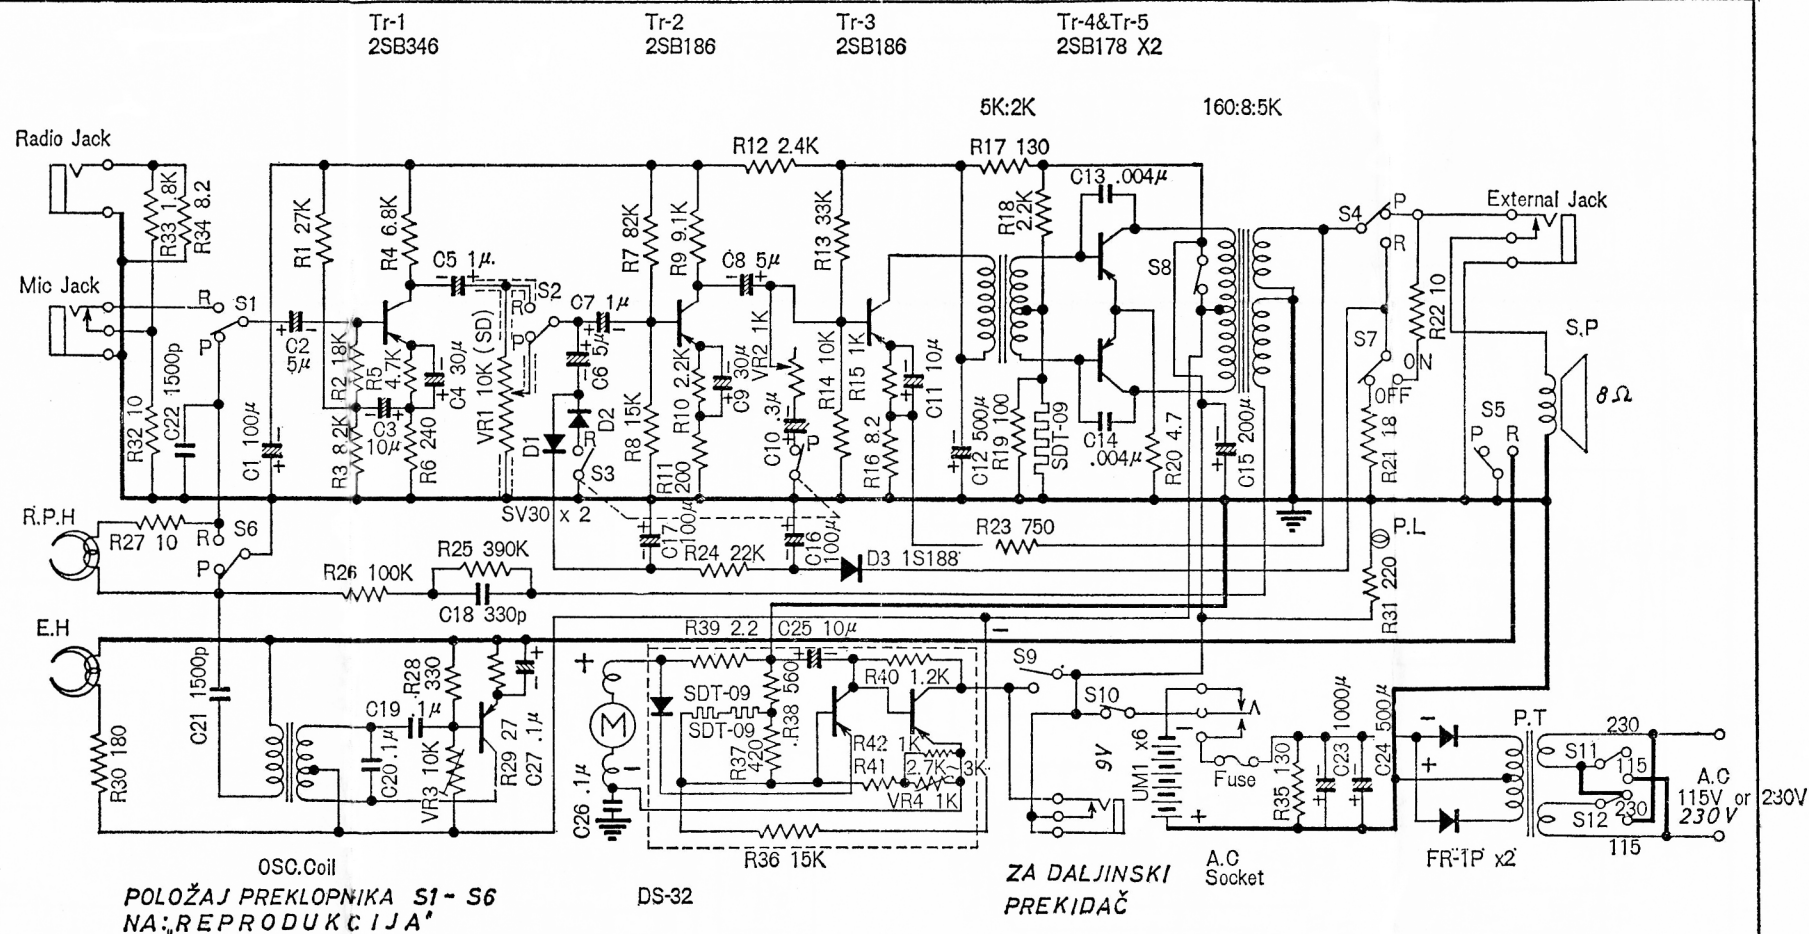

Note ; Shown in Play position.

S1-S6 : Recording SW.

S7 : SP monitor SW.

S8 : Switch on at Record and Play.

S9 : Switch on at Rewind and Fast forward.

S10 : Power switch "Switch off at Stop".

S11,S12 : Voltage changing SW at AC input.

SANYO MR-210